



marantz®

CD Player HD-CD1

Quick Start Guide

Start Here

Starten Sie hier

Commencez ici

Iniziare qui

Iniciar aquí

Begin hier

Starta här

 
Начните здесь

Zaczniij tutaj




Before you begin


What's In The Box



HD-CD1

 


Power cord

 


Remote and batteries



 Product manual
on CD-ROM



Coaxial cable (black)

 


Remote Connector cable (orange)

- For more information, visit www.marantz.com
- Refer to the enclosed CD-ROM manual or Online Manual for other functions information and operation procedure details.
manuals.marantz.com/HDCD1/EU/EN/




1. Connection


- 1 Connect the coaxial audio cable from the HD-CD1 to your amplifier.

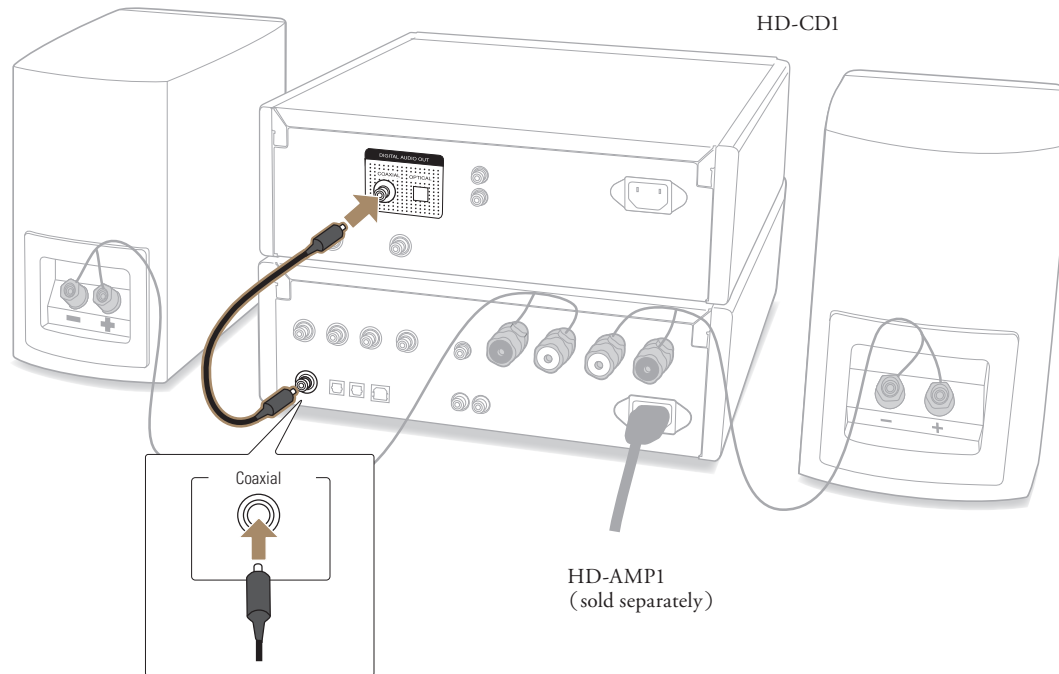

- 2** Connect the power cord between the HD-CD1 and a power outlet.

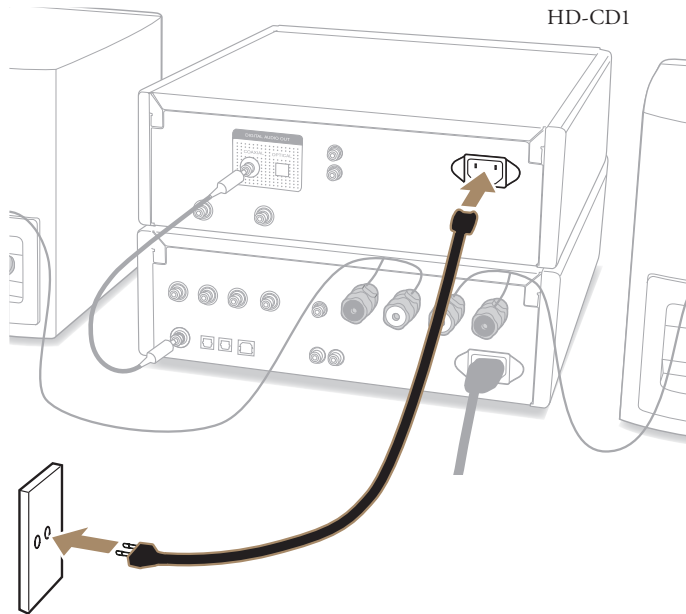


- 3** Insert the batteries into the remote.

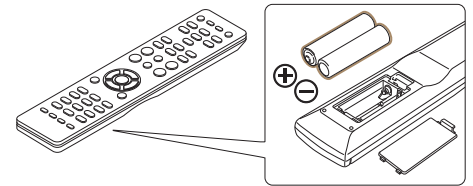


2. Enjoying music from your Disc


1 Press the Open/Close button to open the disc tray.

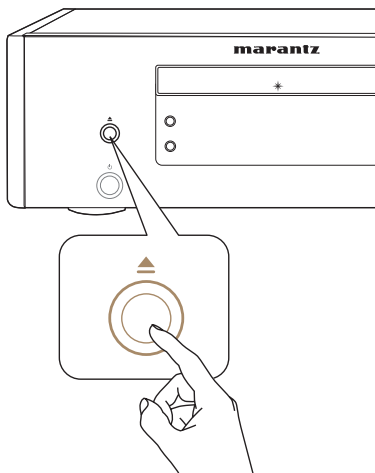

2 Place a CD in the disc tray.

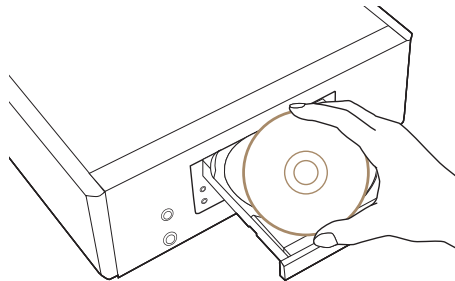

3 Press the Play button to start playback.

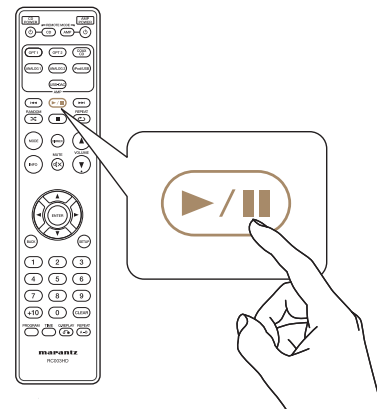

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz[®] is a registered trademark.